

# Type Report

Report Date: 11/01/2021

IRMP000101 IRFast Multipath 3000/4000 Template

Type No	Description	Action Plan
30723	Restore Loss of Polling	Restoral, No Alarm
30724	Restore Message Quarantined	Restoral, No Alarm
30725	Restore Alarm out of Sequence	Restoral, No Alarm
30726	Restore Panel Unenrolled	Restoral, No Alarm
30727	Restore Panel serial number has changed	Restoral, No Alarm
30728	Restore Invalid message format - Contact	Restoral, No Alarm
30729	Restore Invalid message format - IRFast	Restoral, No Alarm
30730	Restore Installer access timer has start	Restoral, No Alarm
30731	Restore Installer access timer has stopp	Restoral, No Alarm
30732	Restore Ethernet path warning	Restoral, No Alarm
30733	Restore GPRS 1 path warning	Restoral, No Alarm
30734	Restore GPRS 2 path warning	Restoral, No Alarm
30735	Restore PSTN path warning	Restoral, No Alarm
30736	Restore Repeated loss of polling	Restoral, No Alarm
30737	Restore Alternate path warning	Restoral, No Alarm
30738	Restore Repeated Ethernet Path Warning	Restoral, No Alarm
30739	Restore Repeated GPRS 1 Path Warning	Restoral, No Alarm
30740	Restore Repeated GPRS 2 Path Warning	Restoral, No Alarm
30741	Restore Repeated Dialup ISP Path Warning	Restoral, No Alarm
30743	Restore Device changed path to Ethernet	Restoral, No Alarm
30744	Restore Device changed path to GPRS 1	Restoral, No Alarm
30745	Restore Device changed path to GPRS 2	Restoral, No Alarm
30746	Restore Device changed path Dial-up ISP	Restoral, No Alarm
30747	Restore Device Service Required	Restoral, No Alarm
30749	Restore SkyTunnel Path Warning	Restoral, No Alarm
30979	Alarm Loss of Polling	System Alarm
30980	Alarm Message Quarantined	System Alarm
30981	Alarm Alarm out of Sequence	System Alarm
30982	Alarm Panel Unenrolled	System Alarm

30983	Alarm Panel serial number has changed	System Alarm
30984	Alarm Invalid message format - ContactID	System Alarm
30985	Alarm Invalid message format - IRFast	System Alarm
30986	Alarm Installer access timer has started	System Alarm
30987	Alarm Installer access timer has stopped	System Alarm
30988	Alarm Ethernet path warning	System Alarm
30989	Alarm GPRS 1 path warning	System Alarm
30990	Alarm GPRS 2 path warning	System Alarm
30991	Alarm PSTN path warning	System Alarm
30992	Alarm Repeated loss of polling	System Alarm
30993	Alarm Alternate path warning	System Alarm
30994	Alarm Repeated Ethernet Path Warning	System Alarm
30995	Alarm Repeated GPRS 1 Path Warning	System Alarm
30996	Alarm Repeated GPRS 2 Path Warning	System Alarm
30997	Restore Repeated Dialup ISP Path Warning	System Alarm
30999	Alarm Device Changed path to Ethernet	System Alarm
31000	Alarm Device changed path to GPRS 1	System Alarm
31001	Alarm Device changed path to GPRS 2	System Alarm
31002	Alarm Device changed path to Dial-up ISP	System Alarm
31003	Alarm Device Service Required	System Alarm
31005	Alarm SkyTunnel Path Warning	System Alarm
31747	Restore Reset	Restoral, No Alarm
31748	Restore Programming Change	Restoral, No Alarm
31749	Restore Panic	Restoral, No Alarm
31750	Restore Low Battery	Restoral, No Alarm
31751	Restore Battery Test	Restoral, No Alarm
31752	Restore Power	Restoral, No Alarm
31753	Restore Test	Restoral, No Alarm
31754	Restore Lost Alarms	Restoral, No Alarm
31755	Restore Armed	Restoral, No Alarm
31756	Restore Panel Fail	Restoral, No Alarm
31757	Restore RF Hardware	Restoral, No Alarm
31758	Restore RF Registration	Restoral, No Alarm
31759	Restore RF Low Signal Strength	Restoral, No Alarm
31760	Restore RF Problems	Restoral, No Alarm
31761	Restore GPRS Registration	Restoral, No Alarm
31762	Restore PSTN Line Volts Low	Restoral, No Alarm
31763	Restore PSTN Link	Restoral, No Alarm
31764	Restore PSTN Problems	Restoral, No Alarm
31765	Restore Network Hardware	Restoral, No Alarm

31766	Restore Network Online	Restoral, No Alarm
31767	Restore Network Problems	Restoral, No Alarm
31768	Restore External Hardware	Restoral, No Alarm
31769	Restore Alarm Panel Serial Connection Pr	Restoral, No Alarm
31770	Restore Alarm Panel Serial Connection Fa	Restoral, No Alarm
31771	Restore Alarm Panel Substitution Alarm	Restoral, No Alarm
31772	Restore Keypad1 Comms	Restoral, No Alarm
31773	Restore Event Rejected	Restoral, No Alarm
31774	Restore Keypad2 Comms	Restoral, No Alarm
31775	Restore SIM1 Data Limit	Restoral, No Alarm
31776	Restore SIM2 Data Limit	Restoral, No Alarm
31777	Restore Panel2 Serial Comms	Restoral, No Alarm
31778	Restore GSM Host Comms	Restoral, No Alarm
31779	Restore Ethernet Host Comms	Restoral, No Alarm
31783	Restore Zone 1 (onboard input)	Restoral, No Alarm
31784	Restore Zone 2 (onboard input)	Restoral, No Alarm
31785	Restore Zone 3 (onboard input)	Restoral, No Alarm
31786	Restore Zone 4 (onboard input)	Restoral, No Alarm
31787	Restore Zone 5 (onboard input)	Restoral, No Alarm
31788	Restore Zone 6 (onboard input)	Restoral, No Alarm
31789	Restore Zone 7 (onboard input)	Restoral, No Alarm
31790	Restore Zone 8 (onboard input)	Restoral, No Alarm
31791	Restore Zone 9 (onboard input)	Restoral, No Alarm
31792	Restore Zone 10 (onboard input)	Restoral, No Alarm
31793	Restore Zone 11 (onboard input)	Restoral, No Alarm
31794	Restore Zone 12 (onboard input) Default:	Restoral, No Alarm
32003	Alarm Reset	System Alarm
32004	Alarm Programming Change	System Alarm
32005	Alarm Panic	System Alarm
32006	Alarm Low Battery	System Alarm
32007	Alarm Battery Test	System Alarm
32008	Alarm Power	System Alarm
32009	Alarm Test	System Alarm
32010	Alarm Lost Alarms	System Alarm
32011	Alarm Armed	System Alarm
32012	Alarm Panel Fail	System Alarm
32013	Alarm RF Hardware	System Alarm
32014	Alarm RF Registration	System Alarm
32015	Alarm RF Low Signal Strength	System Alarm
32016	Alarm RF Problems	System Alarm
32017	Alarm GPRS Registration	System Alarm
32018	Alarm PSTN Line Volts Low	System Alarm
32019	Alarm PSTN Link	System Alarm
32020	Alarm PSTN Problems	System Alarm

32021	Alarm Network Hardware	System Alarm
32022	Alarm Network Online	System Alarm
32023	Alarm Network Problems	System Alarm
32024	Alarm External Hardware	System Alarm
32025	Alarm Alarm Panel Serial Connection Prob	System Alarm
32026	Alarm Alarm Panel Serial Connection Fail	System Alarm
32027	Alarm Alarm Panel Substitution Alarm	System Alarm
32028	Alarm Keypad1 Comms	System Alarm
32029	Alarm Event Rejected	System Alarm
32030	Alarm Keypad2 Comms	System Alarm
32031	Alarm SIM1 Data Limit	System Alarm
32032	Alarm SIM2 Data Limit	System Alarm
32033	Alarm Panel2 Serial Comms	System Alarm
32034	Alarm GSM Host Comms	System Alarm
32035	Alarm Ethernet Host Comms	System Alarm
32039	Alarm Zone 1 (onboard input)	System Alarm
32040	Alarm Zone 2 (onboard input)	System Alarm
32041	Alarm Zone 3 (onboard input)	System Alarm
32042	Alarm Zone 4 (onboard input)	System Alarm
32043	Alarm Zone 5 (onboard input)	System Alarm
32044	Alarm Zone 6 (onboard input)	System Alarm
32045	Alarm Zone 7 (onboard input)	System Alarm
32046	Alarm Zone 8 (onboard input)	System Alarm
32047	Alarm Zone 9 (onboard input)	System Alarm
32048	Alarm Zone 10 (onboard input)	System Alarm
32049	Alarm Zone 11 (onboard input)	System Alarm
32050	Alarm Zone 12 (onboard input) Default: C	System Alarm
32259	Tamper Reset	System Alarm
32260	Tamper Programming Change	System Alarm
32261	Tamper Panic	System Alarm
32262	Tamper Low Battery	System Alarm
32263	Tamper Battery Test	System Alarm
32264	Tamper Power	System Alarm
32265	Tamper Test	System Alarm
32266	Tamper Lost Alarms	System Alarm
32267	Tamper Armed	System Alarm
32268	Tamper Panel Fail	System Alarm
32269	Tamper RF Hardware	System Alarm
32270	Tamper RF Registration	System Alarm
32271	Tamper RF Low Signal Strength	System Alarm
32272	Tamper RF Problems	System Alarm
32273	Tamper GPRS Registration	System Alarm
32274	Tamper PSTN Line Volts Low	System Alarm
32275	Tamper PSTN Link	System Alarm
32276	Tamper PSTN Problems	System Alarm

32277	Tamper Network Hardware	System Alarm
32278	Tamper Network Online	System Alarm
32279	Tamper Network Problems	System Alarm
32280	Tamper External Hardware	System Alarm
32281	Tamper Alarm Panel Serial Connection Pro	System Alarm
32282	Tamper Alarm Panel Serial Connection Fai	System Alarm
32283	Tamper Alarm Panel Substitution Alarm	System Alarm
32284	Tamper Keypad1 Comms	System Alarm
32285	Tamper Event Rejected	System Alarm
32286	Tamper Keypad2 Comms	System Alarm
32287	Tamper SIM1 Data Limit	System Alarm
32288	Tamper SIM2 Data Limit	System Alarm
32289	Tamper Panel2 Serial Comms	System Alarm
32290	Tamper GSM Host Comms	System Alarm
32291	Tamper Ethernet Host Comms	System Alarm
32295	Tamper Zone 1 (onboard input)	System Alarm
32296	Tamper Zone 2 (onboard input)	System Alarm
32297	Tamper Zone 3 (onboard input)	System Alarm
32298	Tamper Zone 4 (onboard input)	System Alarm
32299	Tamper Zone 5 (onboard input)	System Alarm
32300	Tamper Zone 6 (onboard input)	System Alarm
32301	Tamper Zone 7 (onboard input)	System Alarm
32302	Tamper Zone 8 (onboard input)	System Alarm
32303	Tamper Zone 9 (onboard input)	System Alarm
32304	Tamper Zone 10 (onboard input)	System Alarm
32305	Tamper Zone 11 (onboard input)	System Alarm
32306	Tamper Zone 12 (onboard input) Default:	System Alarm
32515	Isolate Reset	System Alarm
32516	Isolate Programming Change	System Alarm
32517	Isolate Panic	System Alarm
32518	Isolate Low Battery	System Alarm
32519	Isolate Battery Test	System Alarm
32520	Isolate Power	System Alarm
32521	Isolate Test	System Alarm
32522	Isolate Lost Alarms	System Alarm
32523	Isolate Armed	System Alarm
32524	Isolate Panel Fail	System Alarm
32525	Isolate RF Hardware	System Alarm
32526	Isolate RF Registration	System Alarm
32527	Isolate RF Low Signal Strength	System Alarm
32528	Isolate RF Problems	System Alarm
32529	Isolate GPRS Registration	System Alarm
32530	Isolate PSTN Line Volts Low	System Alarm
32531	Isolate PSTN Link	System Alarm
32532	Isolate PSTN Problems	System Alarm

32533	Isolate Network Hardware	System Alarm
32534	Isolate Network Online	System Alarm
32535	Isolate Network Problems	System Alarm
32536	Isolate External Hardware	System Alarm
32537	Isolate Alarm Panel Serial Connection Pr	System Alarm
32538	Isolate Alarm Panel Serial Connection Fa	System Alarm
32539	Isolate Alarm Panel Substitution Alarm	System Alarm
32540	Isolate Keypad1 Comms	System Alarm
32541	Isolate Event Rejected	System Alarm
32542	Isolate Keypad2 Comms	System Alarm
32543	Isolate SIM1 Data Limit	System Alarm
32544	Isolate SIM2 Data Limit	System Alarm
32545	Isolate Panel2 Serial Comms	System Alarm
32546	Isolate GSM Host Comms	System Alarm
32547	Isolate Ethernet Host Comms	System Alarm
32551	Isolate Zone 1 (onboard input)	System Alarm
32552	Isolate Zone 2 (onboard input)	System Alarm
32553	Isolate Zone 3 (onboard input)	System Alarm
32554	Isolate Zone 4 (onboard input)	System Alarm
32555	Isolate Zone 5 (onboard input)	System Alarm
32556	Isolate Zone 6 (onboard input)	System Alarm
32557	Isolate Zone 7 (onboard input)	System Alarm
32558	Isolate Zone 8 (onboard input)	System Alarm
32559	Isolate Zone 9 (onboard input)	System Alarm
32560	Isolate Zone 10 (onboard input)	System Alarm
32561	Isolate Zone 11 (onboard input)	System Alarm
32562	Isolate Zone 12 (onboard input) Default:	System Alarm